

GRILL ELECTRIC



FIG 1 FIG 2

RH
SINCE 1922

RAYNERS

CATERING EQUIPMENT HIRE

WWW.RAYNERS.CO.UK

020 8870 6000

Read instructions carefully before use

1. Place on a flat level surface.
2. Read and understand the safety advice label which is attached to the lead.
3. Plug into a 13amp protected electricity supply and turn on.
4. The red neon (**FIG 1**) will illuminate to indicate power to the appliance.
5. Turn the temperature control knob (**FIG 2**) to the required setting.

SAFETY

1. The outside of this appliance will get very hot very quickly, use away from vulnerable people.
2. Lead is a tripping hazard, use caution.

In the event of a breakdown or unsatisfactory working of hired equipment Rayners Catering Hirer Ltd should be notified of the fault. No attempt should be made to repair the item unless permission has been granted by Rayners Catering Hire to do so. No responsibility will be accepted by Rayners Catering Hire for any accident or damage resulting **from** the use of equipment hired whatever the cause.