


HEATED DISPLAY UNIT 2-3-4 LIGHT

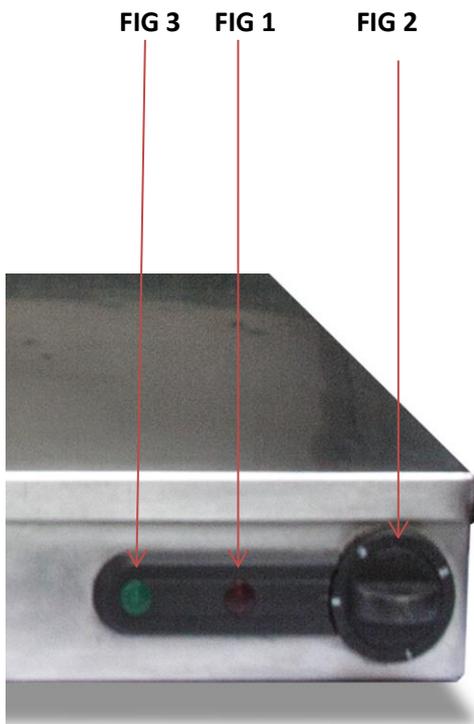

RH
SINCE 1922

RAYNERS

CATERING EQUIPMENT HIRE

WWW.RAYNERS.CO.UK

020 8870 6000

Read instructions carefully before use

1. Place the appliance on a flat level surface.
2. Read and understand the safety advice label attached to the plug.
3. Plug into a 13 amp protected electricity supply.
4. **If you are using an extension lead with this appliance make sure that it is fully unwound.**
5. Turn on power.
6. The red neon (**FIG 1**) will illuminate to indicate power to the unit, and the gantry lights will illuminate.
7. Turn the temperature control knob (**FIG 2**) to the required setting.
8. Setting 1 Low 2 Medium and setting 3 is High continuous heat.
9. The green neon (**FIG 3**) will illuminate to show power to the element and will extinguish when the desired temperature is reached.
10. The neon will continue to go on and off as the thermostat maintains the temperature.
11. This appliance will not heat food from cold.

SAFETY

1. The power cord is a tripping hazard use caution.
2. The infra-red bulbs become very hot very quickly do not touch.
3. Clean up any spillages immediately.

In the event of a breakdown or unsatisfactory working of hired equipment Rayners Catering Hirer Ltd should be notified of the fault. No attempt should be made to repair the item unless permission has been granted by Rayners Catering Hire to do so. No responsibility will be accepted by Rayners Catering Hire for any accident or damage resulting from the use of equipment hired whatever the cause.