 


CASH REGISTER AX100

Read instructions carefully before use

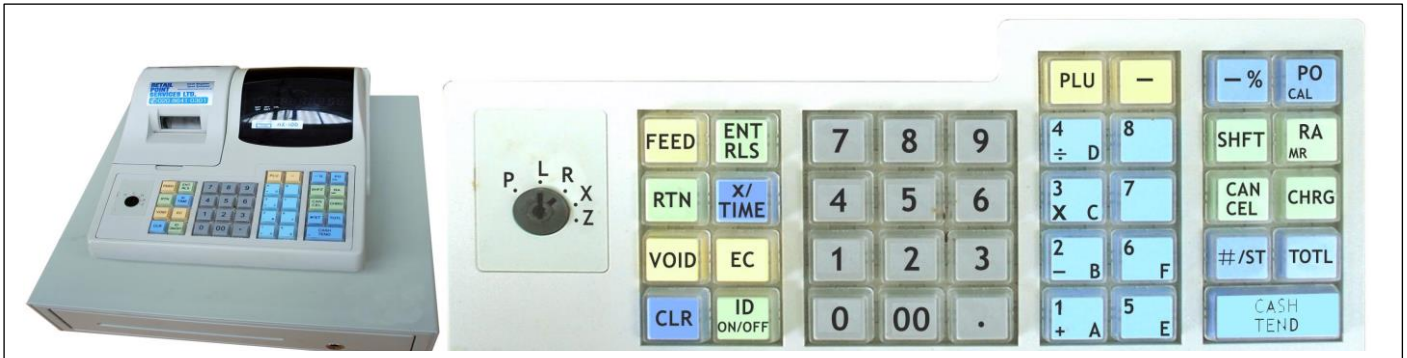

INITIALIZING

1. Plug into a 13 amp protected socket
2. The cash register will come with a till roll
3. Turn key to position (L) and remove plug from the mains, turn key to position (P) plug back into the mains and turn on while holding down key (CL) when released a (1) is displayed on the LED.
4. To set the date turn key to the (P) position press white button (1) followed by (X/TIME). Enter the date as follows: for example 28 Feb 2012 enter 20120228 (yy-mm-dd). Press button (CA/TEND) then button (C) to clear.
5. To set time press white button (2) followed by the (X/TIME) button, enter the time using 24hr format for example for 3.20pm enter 1520, for 3.20am enter 0320. (Please note that the first 0 will not show on the display). Press (CA/TEND) to set, then (C) to clear the screen. Turn key to position (R) press button (X/TIME) once to view the time, twice to view the date.

VENDING

1. Enter the sale amount on the keypad, press button marked (1) repeat for different amounts making sure you press button (1) after each amount to maintain running total.
To repeat the same amount press button (1) continuously. To cancel single transaction press button (C). When the sale is complete

Press **CASH/TEND** button the cash total will now be displayed on the screen and the draw will open automatically.

VOID LAST ENTRY IN CURRENT TRANSACTION BEFORE THE CASH TEND BUTTON HAS BEEN PUSHED.

1. To delete an entry after the (1) button has been pushed, enter the amount to be deleted then press the Void button, press the **BLUE** button marked (1) continue with the sale or press the **CASH/TEND** button, the deleted amount will automatically be deducted from the end total.

VOID SALE AFTER A TRANSACTION HAS BEEN FINALIZED

1. Enter the full amount to be deleted, press the **VOID** button, press the **CASH/TEND** button the **LED** screen will display the cancelled amount.

OPERATOR READINGS

1. Turn key to position (X) then press **CASH/TEND** this will print total of the last session. For daily takings turn key to (Z) and repeat.

ERROR

1. If an error occurs the letter (E) will appear on the **LED** screen, press the (C) button the **LED** screen will display (0.00), continue as normal. Any previous entries will be saved.

CASH REGISTER NT 1081

 
RAYNERS

CATERING EQUIPMENT HIRE

WWW.RAYNERS.CO.UK

020 8870 6000

Read instruction carefully before use

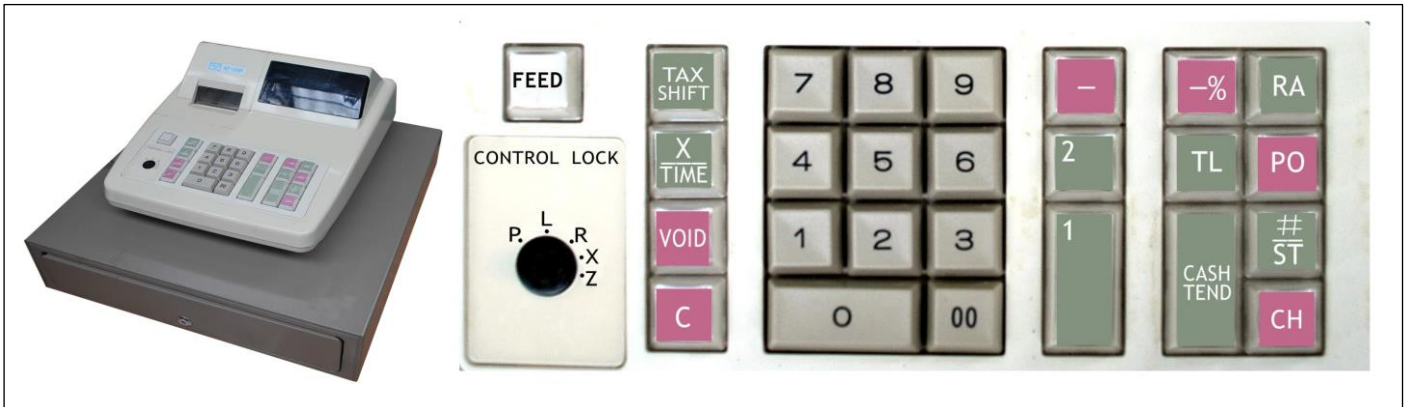

INITIALIZING

1. Plug into a 13 amp socket
2. The cash register will come with a till roll
3. Turn key to position **(P)** To set the date.
4. Enter the date as follows: for example 28 Feb 2012 enter 20120228 (**yy-mm-dd**).
5. Press button **(ST)** then button **(C)** to clear.
6. To set time, enter using 24hr format for example for 3.20pm enter 1520, for 3.20am enter 0320. **(Please note that the first 0 will not show on the display).** Press **(C)** to clear the screen. Turn key to position **(R)** this will set the date and time.
7. Press button **(X/TIME)** once to view the time, twice to view the date.

VENDING

1. Enter the sale amount on the keypad, press the grey button marked **(1)** repeat for different amounts making sure you press button **(1)** after each amount to maintain running total.
2. To repeat the same amount press button **(1)** continuously. To cancel single transaction press button **(C)**. When the sale is complete
3. Press **CASH/TEND** button the cash total will now be displayed on the screen and the draw will open automatically.

VOID LAST ENTRY IN CURRENT TRANSACTION BEFORE THE CASH TEND BUTTON HAS BEEN PUSHED.

1. To delete an entry after the **(1)** button has been pushed, enter the amount to be deleted then press the Void button, press the **GREY** button marked **(1)** continue with the sale or press the **CASH/TEND** button, the deleted amount will automatically be deducted from the end total.

VOID SALE AFTER A TRANSACTION HAS BEEN FINALIZED

1. Enter the full amount to be deleted, press the **VOID** button, press the **CASH/TEND** button the **LED** screen will display the cancelled **amount**.

OPERATOR READINGS

1. Turn key to position **(X)** then press **CASH/TEND** this will print total of the last session. For daily takings, turn key to **(Z)** and repeat.

ERROR

1. If an error occurs, the letter **(E)** will appear on the **LED** screen, press the **(C)** button the **LED** screen will display **(0.00)**, continue as normal. Any previous entries will be saved.

CASH REGISTER PZ1

Read instructions carefully before use



INITIALIZING

1. Plug into a 13 amp socket
2. The cash register will come with a till roll
3. Turn key to position **(L)** and remove plug from the mains, turn key to position **(Z/P)** plug back into the mains and turn on while holding down key **(CL)** until----- is displayed, turn the key back to the **(L)** position.
4. To set the date turn key to the **(ZP)** position press white button **(1)** followed by **(X/TIME)**. Enter the date as follows: for example 28 Feb 2012 enter 20120228 **(yy-mm-dd)**. Press button **(CA/TEND)** then button **(C)** to clear.
5. To set time press white button **(2)** followed by the **(X/TIME)** button, enter the time using 24hr format for example for 3.20pm enter 1520, for 3.20am enter 0320. **(Please note that the first 0 will not show on the display)**. Press **(CA/TEND)** to set, then **(C)** to clear the screen. Turn key to position **(R)** press button **(X/TIME)** once to view the time, twice to view the date.

VENDING

1. Enter the sale amount on the keypad, press button marked **(1)** repeat for different amounts making sure you press button **(1)** after each amount to maintain running total.
To repeat the same amount press button **(1)** continuously. To cancel single transaction press button **(C)**. When the sale is complete

Press **CASH/TEND** button the cash total will now be displayed on the screen and the draw will open automatically.

VOID LAST ENTRY IN CURRENT TRANSACTION BEFORE THE CASH TEND BUTTON HAS BEEN PUSHED.

1. To delete an entry after the **(1)** button has been pushed, enter the amount to be deleted then press the Void button, press the **BLUE** button marked **(1)** continue with the sale or press the **CASH/TEND** button, the deleted amount will automatically be deducted from the end total.

VOID SALE AFTER A TRANSACTION HAS BEEN FINALIZED

1. Enter the full amount to be deleted, press the **VOID** button, press the **CASH/TEND** button the **LED** screen will display the cancelled amount.

OPERATOR READINGS

1. Turn key to position **(X)** then press **CASH/TEND** this will print total of the last session. For daily takings turn key to **(Z)** and repeat.

ERROR

1. If an error occurs the letter **(E)** will appear on the **LED** screen, press the **(C)** button the **LED** screen will display **(0.00)**, continue as normal. Any previous entries will be saved.