

Read instructions carefully before use THIS HEATER IS SUITABLE FOR OUTSIDE USE 1. Remove the power cord from the storage compartment situated at the rear of the heater illustrated in the bottom picture. 2. Read and understand the advice label attached to the lead. 3. Make sure the cord is fully unravelled before plugging into

4. If you are using an extension lead with this appliance make sure that it is fully unwound

- 5. The red standby indicator will illuminate.
- Press the button marked **ON/HIGH/LOW**. The middle orange light will illuminate and both heating elements will come on.
- 7. To reduce the heat press button marked **ON/HIGH/LOW** again, this will turn off one of the heating elements leaving one on. The corresponding orange light will illuminate.
- 8. To operate the **PIR** press the button marked economy, the green energy saving light will illuminate. The heater will now turn off when no one is standing in the near vicinity. When someone moves within range it will come back on.
- 9. After use make sure the appliance is turned off by pressing the off button, then unplug from the mains.
- 1. The cable is a tripping hazard so make sure it is place back into the storage compartment.
- 2. The heater has a tilt switch attached; in the event that it is knocked over it will turn off.
- Never try to move the heater while it is on or plugged in. Ensure that it has fully cooled before attempting to move.

In the event of a breakdown or unsatisfactory working of hired equipment Rayners Catering Hirer Ltd should be notified of the fault. No attempt should be made to repair the item unless permission has been granted by Rayners Catering Hire to do so. No responsibility will be accepted by Rayners Catering Hire for any accident or damage resulting from the use of equipment hired whatever the cause.